

## SHORTCUT SHEET

### DYNAMO



The Dynamo is a digitized communication device that has dynamic display features for organizing messages. It is the smallest device in the DynaVox family of products and is often a stepping-stone for future communication success.

#### TO USE

##### **TURNING THE DEVICE ON**

Press the **Power** button on the upper right hand corner of the front of the Dynamo. The green LED will come on for a moment and the display will brighten. You will see the page that was on the screen the last time the device was on.

##### **TURNING OFF THE DEVICE**

There are three ways to turn off the device:

1. Press the **Power** button in the upper right hand corner of the device. When the "Are you sure you want to shutdown?" message appears, press **Yes**.
2. Press the **Setup** button on the control panel (at the top of the screen). From the Dynamo Setup menu, press **Shut Down**. When the "Are you sure you want to shutdown?" message appears, press **Yes**.
3. Press a **Shut Down** button that has been programmed onto a page. When the "Are you sure you want to shutdown?" message appears, press **Yes**.

## TO CHARGE THE BATTERY

Turn off the device. Plug the A/C cord into the charger. Plug the charger into the charger jack on the right hand side. The amber LED light will illuminate. When the amber LED light goes out, charging is complete. (A full charge takes about 3 hours).

## TO MAKE A NEW PAGE

1. If the **Record** and **Modify** button are not visible on the Control Panel at the top of the screen, press the **Setup** button.
2. Press the **System Settings and Backup** button.
3. Press the **Control Panel Buttons** button so that it says “**All Controls**”.

NOTE: Password protection can be set for **Record**, **Modify**, and **Setup** commands. If the password has been set or changed, you can always use the master password **Dynamo** to access these settings.

4. Press the **Setup** button on the control panel. Press **Make New Page**. Press the **More** and **Fewer** buttons to set the number of rows and columns you want on the new page.
5. Use the **Font Size** and **Add Message Window** buttons until the desired settings are displayed. Press **OK**.
6. Type in the name of the new page. Press **OK** to close the keyboard window and return to the new page.

## TO CREATE/MODIFY A BUTTON

1. Press the **Modify** button on the Control Panel. Press the button you want to create or modify.
2. Press **Modify Symbol** to choose a symbol for the button. Press **Modify Label** to choose the label for the button. You can also make the button link, or change, to other pages, by selecting the **Modify Page Link** button, then scrolling up or down to highlight the page you want to link to.
3. Press **OK** when you are finished modifying the button.

## TO RECORD A MESSAGE INTO A BUTTON

1. Press the **Record** button on the upper left hand side of the Control Panel. Press the button into which you want to record a message.
2. When you release the button, recording will begin. Speak your message clearly into the microphone (the orange oval on the front of the device).
3. Press the button again when you are finished recording.

## **PRODUCT INFORMATION**

**Contact Information:** DynaVox Systems LLC  
2100 Wharton Street, Suite 400  
Pittsburgh, PA 15203  
800-344-1778  
[www.dynavoxsys.com](http://www.dynavoxsys.com)

**Cost:** \$2089.00

*Created by Cindy MacIsaac, Mountain BOCES, 4/19/04*

For more SWAAAC Shortcut Sheets, go to [www.swaac.org](http://www.swaac.org), click on **AT Loan Bank** and then click on **Shortcut Sheets**. Would you like a Shortcut Sheet that doesn't exist? Contact the WestAC office at (970) 248-0876 or [carrie.foster@uchsc.edu](mailto:carrie.foster@uchsc.edu).